

Quick Start Guide

1:3 DVD/CD Copy Tower™ Part Number: 260180

1:5 DVD/CD Copy Tower™ Part Number: 260181

1:7 DVD/CD Copy Tower™ Part Number: 260182

Welcome!

Congratulations on your purchase of an Aleratec DVD/CD Copy Tower, considered by industry experts to be one of the finest DVD/CD duplicators available.

The entire Aleratec team is committed to providing you with courteous service. Our knowledgeable staff will strive to make owning and operating your new Aleratec DVD/CD Copy Tower a pleasant experience.

This Quick Start Guide will lead you step-by-step through the basic operation procedures of your DVD/CD Copy Tower.

For more detailed information on configuring the DVD/CD Copy Tower and applying its various capabilities, please refer to the User Guide on the CD included.

We at Aleratec appreciate your selection of our product, and wish you great success and enjoyment of your new DVD/CD Copy Tower.


Included Items

- DVD/CD Copy Tower
- Power Cord
- User Guide CD & Quick Start Guide (this document)
- Aleratec Registration Card

Product Features

- Up to 7 simultaneous DVD copies at up to 22x or CD copies at up to 48x
- Powerful Control Features with backlit LCD Display and intuitive menu maximizing copy control and flexibility
- Simple one touch operation
- Highest recording speeds for high volume copying
- Stand-Alone, no computer required

Key Items on the DVD/CD Copy Tower

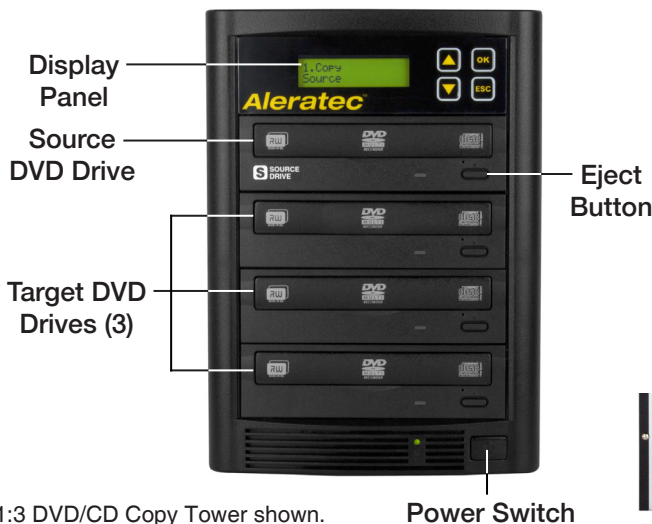

Controller: UP arrow is used to scroll backward through functions or menus
OK is used to execute a function, or enter a menu



DOWN arrow is used to scroll forward through functions or menus

ESC is used to cancel a function, or exit a menu




Warning: This product has a manually switchable power supply. Make sure that the power supply is set to the proper voltage for your region.

Getting Started

Main Menu Functions

This section provides a listing of the functions on the DVD/CD Copy Tower. Detailed descriptions of each function are given in the next section. The functions are numbered for easy reference; these numbers are also used in the next section. There are 8 main menu items that will display in the DVD/CD Duplicator Display Panel. These are:

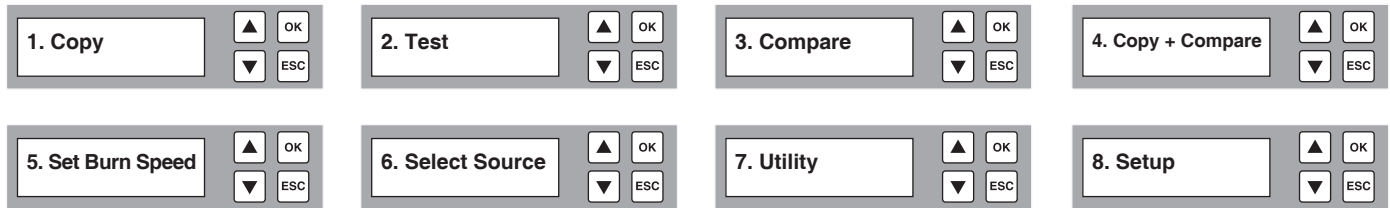


For Quick On-The-Fly Copies

During the duplication process, data will be simultaneously written to all blank discs loaded in the DVD/CD Copy Tower. Please make sure the source disc is placed in the Source Drive.

1. Place blank discs into the DVD/CD Recorders as needed; when the DVD/CD Recorders detect the discs are present, press the OK button, and the duplicator will start copying.



2. The LCD will display the status of the copying process.

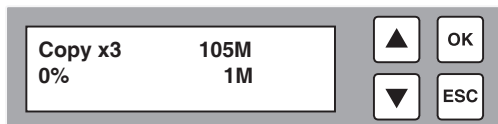

3. When Copy is finished, discs which have passed will be ejected automatically and failed discs will remain in the DVD Recorders. Press the OK button to eject any failed discs.



Note: DVD-RW discs which already contain data can also be used as blanks in the DVD/CD Copy Tower. Any data stored on DVD-RW discs will be automatically erased before copying new data. Be sure you do not want data on DVD±RW discs inserted as blanks as any DVD±RW discs inserted in the DVD-Recorders to be used as blank media will automatically be erased, and then the content from the source DVD will be recorded on them.

Please refer to the User Guide found on the disc for more detailed information.

Technical Support Addresses and Phone Numbers

- By e-mail: support@aleratec.com – Skype: [support.aleratec.com](https://www.skype.com/en/contacts/aleratec)
- By Telephone: 1-818-678-0484 – FAX at: 1-818-678-0483
- Technical Support Group can be reached 8:00 AM to 5:00 PM, Pacific Time, Monday through Friday, excluding U.S. holidays. Please try to call from a phone near your computer system.

Access is available 24 hours a day, 365 days a year, via The World Wide Web at: www.aleratec.com